

Sani Submersible UV-C Installation

Supplied with unit:

- 1pc Safety Glasses



- 2pc metal fastening disks with screws




- 1pc cable tie



- 2pc ballast fastening P-clips



- The hole will need to be made on the opposite side of the water inlet

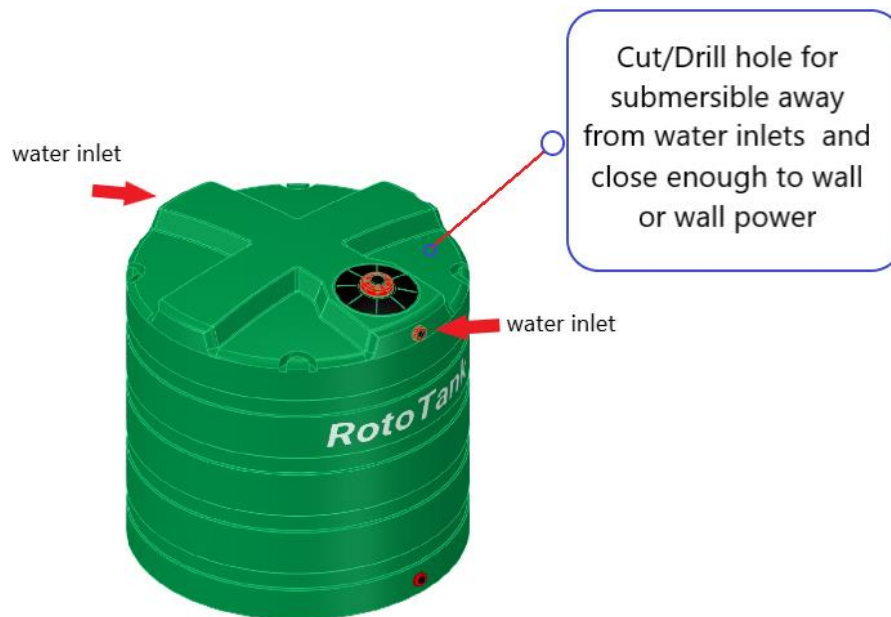

- 2 disks are found loose with the unit – These disks will clamp around the power cable.
- Use a circle saw and cut a whole smaller than the screw holes and big enough to have the weight and light fitted.



- When making the whole try have a container ready to catch all the fine saw shavings
- Place the submersible light in tank with 10 cm of the light above the water level (kills anything that could fly in.)
- Use the 2 disks to clamp the cable in place and use 2 bolts and nuts to tighten all in place.
- The Ballast can be positioned using the P- clips.

Before installing the unit ensure safety glasses are worn in the event of the unit switched on. Please ensure no animals or occupants are exposed to the light when powered on. User wearing safety glasses is to ensure that the light within tank is not exposed. Warning labels are visible and maintenance after 9000H is scheduled.